

Instruction Manual

Shizza
HOME AUDIO

 
TT3/JT3/T30 Suitcase-Style Record Player




Please read instructions carefully before use and store
in a safe place for future reference

SKU: RPL011PNK / RPL011PPL / PRL011LCM

DESCRIPTION

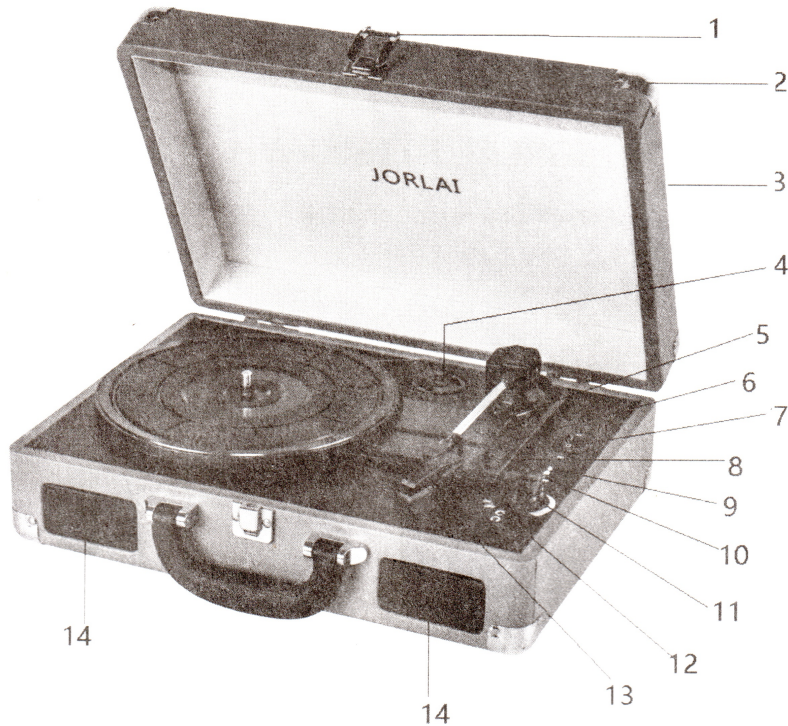

 - 1.Lock catch
- 2.Protect corner
- 3.Dust cover
- 4.Adapter -Use this when playing 45rpm records with cut out centres.
- 5.Tone arm lift
6. Auto stop control
7. Bluetooth switch
- 8.Speed selection-Three speed for choice:33,45,78rpm.
- 9.Battery LED indicator
10. Bluetooth LED indicator
- 11.Power switch /Volume control
- 12.Headphone jack
- 13.Cartridge
- 14.Speaker

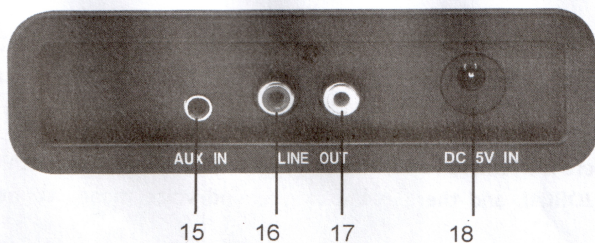

- 15. Aux in
- 16. Line out R channel
- 17. Line out L channel
- 18. DC power jack

INITIAL SET-UP

MAINS CONNECTION

Ensure that the mains voltage of your home corresponds to the operating voltage of the unit. Your unit is ready to be connected to a mains voltage of 5V DC adaptor.

AMPLIFIER CONNECTION (if required)

Whilst you can listen to your new turntable using the built in speakers you may wish to connect it to your existing Hi Fi system. Connect the audio plugs to the Line input on your mixer or amplifier using an RCA cable (not supplied)

- **Red plug into R/H channel input.**
- **White plug into L/H channel input.**

Playing a record

- Place the record of your choice on the turntable. If required, do not forget to place the adaptor on the record spindle.
- Choose the desired playing speed using the speed selection switch between 33.3, 45 and 78rpm.
- Turn on the Rotary Power Switch, note that this also controls volume.
- Release the tone arm lock.
- Raise the arm with your hand lightly.
- Place the stylus vertically over the first track of the record, the turntable will start turning automatically.
- Put down the stylus slowly on to the record to play.
- When a record comes to the end, the turntable will stop automatically if the auto-stop switch is in the ON position. If the switch is in the off position then it will keep revolving until the tone arm is returned to the tone arm rest.
- Lift up the tone arm and put it on the rest when finished.

- Replace the protective cap on the stylus and close the tone arm lock.
- Turn off power at mains.

Bluetooth function

- Press the Bluetooth switch, there is a remind voice, and blue LED will be lighting and flashing
- Search the Bluetooth name **JORLAI**, and there is another remind voice means connected successfully.

 
Rechargeable battery function

- When there is no power for AC adapter outside, you can use this battery instead.
- When charging the battery or playing the record, the LED light will be red color.
- If its full charged, the LED light will become green.

MAINTENANCE

REPLACING THE STYLUS


- Refer to the figures 1-8

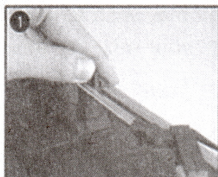

push the arm lock to release the tone-arm.




 
take off cap of the cartridge to expose the needle out.

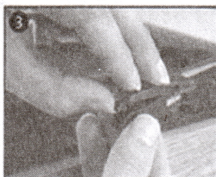

separate the cartridge from the socket lightly.



  take off the audio-line from the cartridges completely.

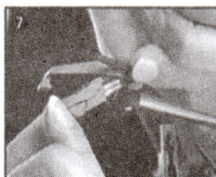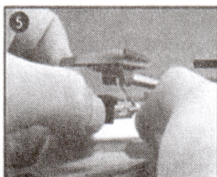


to fit a new one just in opposite deals, insert the audio-line accordingly, and install the cartridge to the socket lightly.

NOTE: Please exercise extreme care whilst performing this operation so as to avoid the tone arm and audio line wires from any damage.

INSTALLING A NEW STYLUS CARTRIDGE

 - Refer to the figures 5 & 6

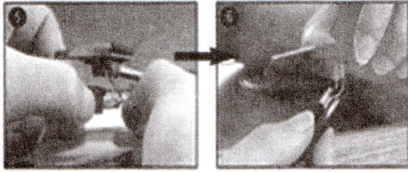

NOTES

We advise you to clean your records with an anti-static cloth to gain maximum enjoyment from them and to make them last.

We would also point out that for the same reason your stylus should be replaced periodically (approximately every 250 hours)

Dust the stylus from time to time using a very soft brush dipped in alcohol (brushing from back to front of the cartridge)

WHEN TRANSPORTING YOUR RECORD PLAYER DO NOT FORGET TO:

- Replace the protective cap on the stylus.
- Put the rest clip into the pick-up arm.

 
RE-ATTACHING THE TURNTABLE DRIVE BELT

The turntable drive belt is factory fitted - use these instructions only if the turntable fails to revolve ...

STEP 1

Remove the turntable anti-slip mat from the platter. Looking through one of the holes in the platter, check if the belt has indeed come off the turntable pulley.


Use a screwdriver to remove the black iron 'C'-clip (iron binder) and lift the turntable off the Turntable mechanism.

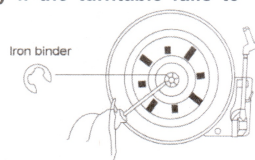

STEP 2

Retrieve the dropped black rubber band (the drive belt) and place it around the platter base - then pull the belt out gently without overstretching.

 
Turn the platter over while holding on to the belt.

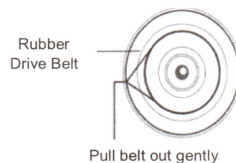

STEP 3

Looking through one of the holes in the platter, locate the small Brass Pulley (the pulley is attached to the turntable motor). Then proceed to hook the pulled out part of the rubber belt by hand around the Pulley and then line up the centre of the platter with the silver turntable spindle.

 Lower the platter gently onto the deck and let go until it is back in position.

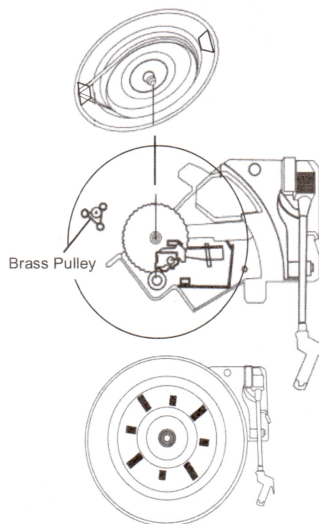

STEP 4

When the turntable platter is in the correct position, check the belt is still around the pulley and then replace the 'C'-clip to secure the turntable to the spindle.

Shizza

HOME AUDIO

Hyperion Trading Pty Ltd
ABN: 28 681 402 693

48 Gardner St,
Richmond, Vic, 3121

Phone: 0494 191 337
email: support@shizza.com.au
Web: www.shizza.com.au



Showroom:

48 Gardner St, Richmond, Vic, 3121

Hours:

Monday: Closed
Tuesday - Friday: 4pm to 7pm
Saturday & Sunday: 9am to 5pm