

Instruction Manual

Shizza
HOME AUDIO

L04 **Retro Vinyl Record Player** **with Legs**



Please read instructions carefully before use and store
in a safe place for future reference

SKU: RPL013BLK

SAFETY INSTRUCTIONS

To avoid fire or vibration, don't extend the power cord or use other socket, make sure to insert the contact piece of the plug into the hole completely.



The lightning symbol with an arrow in the equilateral triangle warns the user of the presence of a non-insulated hazardous voltage sufficient to cause an electrical shock in the outer shell of the product.

CAUTION **RISK OF ELECTRIC SHOCK** **DO NOT OPEN**

WARNING: To avoid electric shock, please do not move the parts inside the cover plate (or back plate), consult a professional for maintenance.



Please use the original power adapter, the use of other non-compliant adapters may cause damage to the product

Safety Instructions

1. Choose a safe location and do not use this product near water or heat source.
2. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards . Refer all servicing to qualified service personnel.
3. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
4. Unplug the product during lightning storm or when unused for long periods of time.
5. Do not move the power cord randomly or squeeze the plug.
6. Do not attempt to clean the unit with chemical solvent as this might damage it.
Using a clean&dry cloth is recommended for cleaning.
7. Before starting the machine, please confirm whether the plug is fully plugged in .
8. Please unplug the power before moving the player.

FUNCTION OPERATION INSTRUCTIONS

 
 
Deluxe Version



- 1.Cover
- 2.Speaker

Gramophone

- 1.Turntable Platter
- 2.45 RPM adapter
- 3.Last song
- 4.Next song
- 5.USB jack.
- 6.Tonearm Lever
- 7.Play / pause / function key(long press)
- 8.Speed Switch (33 $\frac{1}{3}$ /45/78)
- 9.Pilot lamp
- 10.Automatic stop switch
- 11.Tonearm
- 12.Hold Down Clip
- 13.Power/volume switch
- 14.HeadPhone Jack
- 15.Stylus Needle
- 16.LINE OUT audio output interface
- 17.AUX IN Jack
- 18.DC IN power Jack

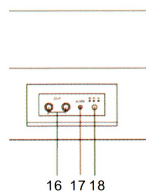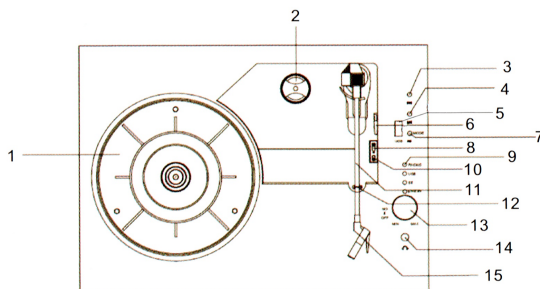

OPERATION INSTRUCTIONS

Initial Setup

1. Place the record player on a flat and level surface . The selected location should be stable and free from vibration.
- 2 . Remove the tonearm clip that is holding the tonearm.
- 3 . Connect the AC adaptor to the Power Jack of the record player .
4. Select the correct speed of the vinyl record you played (33 $\frac{1}{3}$ /45/78).
5. When playing the large-hole disc, place the 45 RPM Adapter into the middle.

Note : Do not plug the AC power adaptor to power outlet before all the assembly is completed Before turning the power on , make sure again all the connection settings are correct . Always turn off the power when connecting or disconnecting.

Auto-stop

If the Auto-stop Switch is set to ON position , the platter will stop spinning automatically when the record plays to the end . In some rare occasion , if the turntable stops playing before the end of the record , set the switch to OFF position the turntable should overcome this issue.

Output Connection

Connect to external loudspeaker or power amplifier with audio wire:Red plug connect to "R" channel output,White plug connect to "L" channel output.

Tips: please confirm the connection before playing, after the connection is good, control the volume by power amplifier audio.

Playing a record

1. Rotate the On / Off Volume Knob to turn on the power ,the power led will be light.
2. Set the Function to PHONO position.(Deluxe unit should long press the functions key when the light turn into the PHONO position)
3. Select the correct speed of the vinyl record you played (33 $\frac{1}{3}$ /45/78).
4. Place the record on the turntable . Use the 45 RPM Adapter on the record spindle if necessary.
5. Remove the stylus shield from the stylus assembly.
Note : To avoid stylus damage , make certain the included stylus shield is in place whenever the turntable is being moved or cleaned.
6. Release the tonearm Hold Down Clip.
Note : When the turntable is not in use , remember to lock back hold down clip.
7. Use the Tonearm Lever to lift up the tonearm.
8. Gently move the tonearm over the record where play is desired to begin . Set the Tonearm Lever back to the down position , the tonearm will descend slowly onto the record and begin to playback.
9. When the record is finished playing , use the Tonearm Lever again to raise the tonearm and then return it to the Tonearm Rest . Release the lever to let the tonearm sit back at its rest . To suspend the playback , repeat the same steps.
10. Lock the Hold Down lip to secure the tonearm.

OPERATION INSTRUCTIONS

Bluetooth Function

1. Set the Function to BT position. (Deluxe unit should keep press the functions key when the light turn into the BT position)
2. Turn on the Bluetooth feature of your audio device , search for "RPBT " and pair .
3. Once your device is successfully paired with the unit , you will hear "Ding Dong"
4. Play and control music from your device to the record player.

USB Function

1. Insert a U - disk at first and set the function to USB position. (Deluxe unit should keep press the functions key when the light turn into the USB position)
2. Wait a few seconds the device will automatically recognize and start play.
3. Select the song by using the top and bottom keys.

 
Line In Function

1. Set the Function to LINE IN position. (Deluxe unit should keep press the functions key when the light turn into the LINE IN position)
2. Connect your iPod , MP3 player , mobile phones etc to the AUX IN port with a 3.5mm audio cable (not included).
3. Rotary the volume knob to adjust the volume . (iPod , MP3 player , mobile phones volume control may also impact the volume level so ensure that it is also turned up .)

Needle Replacement


Removing Needle

1. Gently pull down the front edge of the needle.
2. Pull needle forward.
3. Pull out and remove .

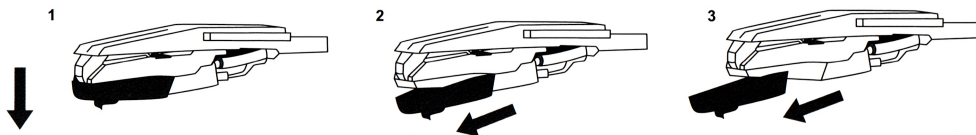

Installing Needle

 1. Position the needle with its tip facing down.
2. Line up the back of the needle with the cartridge.
3. Insert the needle with its front end at a downward angle and gently lift the front of the needle upward until it snaps into place.

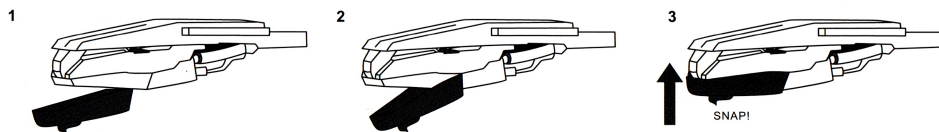

Shizza

HOME AUDIO

Hyperion Trading Pty Ltd
ABN: 28 681 402 693

48 Gardner St,
Richmond, Vic, 3121

Phone: 0494 191 337
email: support@shizza.com.au
Web: www.shizza.com.au



Showroom:

48 Gardner St, Richmond, Vic, 3121

Hours:

Monday: Closed
Tuesday - Friday: 4pm to 7pm
Saturday & Sunday: 9am to 5pm