

Instruction Manual

Shizza
HOME AUDIO

L30 **Dark Walnut Record Player** **with Speakers**



Please read instructions carefully before use and store
in a safe place for future reference

SKU: RPL014WNT

Safety reminder.

- 1.Do not expose to the sun or install it next to hot objects such as high temperature and radiator.
- 2.Stay away from bathrooms, swimming pools and other environments. Do not use it in a wet environment with water.
- 3.For the safety, when not in use for a long time, please make sure that the power supply is completely interrupted.
- 4.Try to use the original adapter, do not use the power adapter with the wrong parameters

Technical specifications

Power input: AC100-240V.

Speaker power :10W x2.

Speaker size:110*110*180mm

Speaker N.W:2KGS

Power consumption: 9W(max)

Product size: 340x315x115mm.

 
Function:Turntable,Earphone,Bluetooth in and out,Aux in

N.W: 2.5KGS.

Packaging includes.

1. an instruction manual.
2. 5V1A power adapter.
3. Audio connection cable*2

Locations of controls and indicators

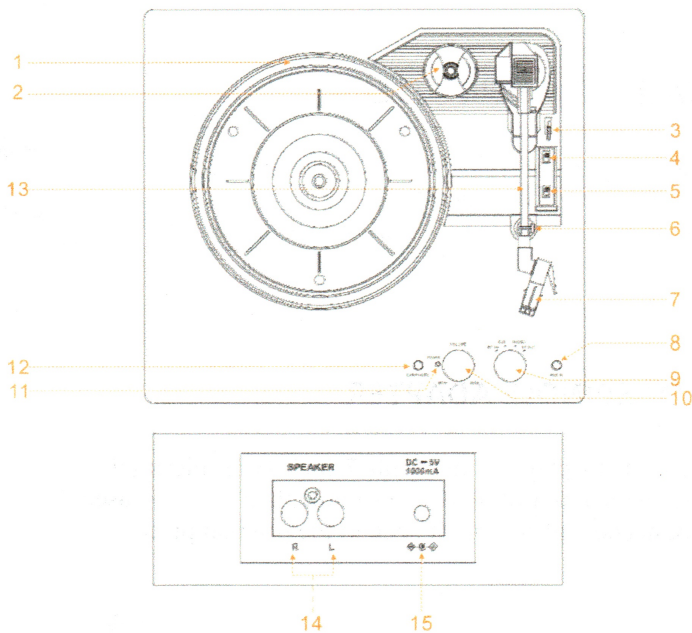

- | | |
|----------------------------|-------------------------|
| 1. Turntable | 9. Function switch knob |
| 2. Vinyl adapter | 10. Power/volume switch |
| 3. Tonearm lifting rod | 11. indicator |
| 4. Automatic stop switch | 12. Earphone jack |
| 5. Speed regulating switch | 13. Tonearm |
| 6. Tonearm locking buckle | 14. speaker socket |
| 7. Pickup | 15. Power socket |
| 8. Aux in jack | |

 
How to replace the stylus

1. Removing old stylus
2. Set a screwdriver at the tip of the stylus and push down to the direction 'A'.
3. Remove the stylus by pulling it down and forward.




INSTALLING A NEW STYLUS

1. Hold the tip of the stylus and insert the other edge by pressing in the direction 'B'.
2. Push up in the direction 'C' until it locks at the tip.

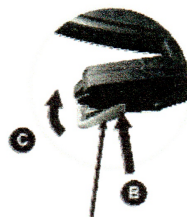

USE OF SPINDLE ADAPTER

If you want to play a vinyl with 7 inch hole, please take out the spindle adapter and fit on centre spindle, then it can be used. When it is not needed, please put it back to the original place.

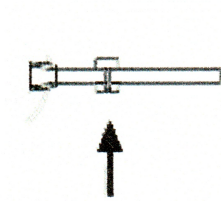

Power input

Plug the power adapter into the socket⑮ and rotate the **power / volume** switch⑨ to the right

Note: the phonograph is normally powered by AC100-240V. The adapter is 5V1A, if you use another power adapter, it will damage the phonograph.

Line out function Operation

1. Connect the **Passive speaker** with a connecting cable (black line corresponds to black hole, red line corresponds to red hole)
2. Then red plug to R channel output: White plug to L channel output.

Attention: need to be used with passive speakers , if use phonograph alone, no sound.

Turntable player Operation

1. Rotated "Function switch knob" ⑨ to the **PHONO** position.

2. Put the vinyl on the turntable①.

Most vinyls have 33 revolutions and need not be adjusted. For example, when playing a large hole record, you need to put the adapter on the central shaft.

3. Remove the white protective cover of the stylus⑦

and pull it out in parallel; unlock the locking buckle⑥ of the fixed tonearm .

4. Push up the lifting lever of the tonearm⑬, and move it close to the edge of the record, the turntable begins to rotate, pull the lifting rod of the tonearm, and start playing when the tonearm slowly falls onto the vinyl.

5. When the automatic stop switch④ is in the position of ON, the vinyl will automatically stop after the end. If it is in the position of OFF, it will not stop.

6. Please install the protective cover of the stylus and buckle the locking buckle⑥ of the tonearm⑬ if you don't need it for a long time.

BT in and out function Operation

1. Rotate the power switch⑨ to the **BT in** position.
2. Turn on the Bluetooth function of the mobile phone, search and select the phonograph Bluetooth “Didatime” for pairing, and hear the prompt tone after pairing, you can play the songs in the mobile phone.
3. Press the pause / play, next, and previous keys on phone to select the song.

4. when the function switch⑨ goes to the **BT OUT**

position and turns on the Bluetooth speaker, the machine will automatically search and match, and will start to play music after success.

The volume is controlled by the Bluetooth speaker.

Note: the transmission distance of Bluetooth function is about 10 meters when there is no barrier.

Please try to stay away from interference sources such as router induction cookers.

Aux in function Operation.

Please plug the 3.5mm audio cable into the **AUX IN** Jack

⑧, and then adjust the function switch knob⑨ to the

AUX position, and the phonograph can be used as a speaker for computers and other devices.

Note: when using other features, please unplug the 3.5mm audio cable.



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Shizza

HOME AUDIO

Hyperion Trading Pty Ltd
ABN: 28 681 402 693

48 Gardner St,
Richmond, Vic, 3121

Phone: 0494 191 337
email: support@shizza.com.au
Web: www.shizza.com.au



Showroom:

48 Gardner St, Richmond, Vic, 3121

Hours:

Monday: Closed
Tuesday - Friday: 4pm to 7pm
Saturday & Sunday: 9am to 5pm