

Instruction Manual



SL2

Silver Hi-Fi Record Player Turntable with Bluetooth



Please read instructions carefully before use and store
in a safe place for future reference

SKU: RPL023SLV

Quick Setup

1. Make sure you remove the plastic cover that protects the needle before use as it will definitely scratch your records.
2. Remove the twist cable that holds the tonearm in place and unlock.
3. Place the metal platter onto the spindle.
4. Carefully follow the instructions (Next page) to place the belt onto the motor spindle.
5. Connect the player to a Bluetooth speaker and you should be good to go.

Please Note: If the speed seems too fast then the rubber belt might need to be moved on the spindle. If the belt is not in the middle of the spindle then it can grab the outer wall and speed the record up slightly. Just redo the belt procedure and the speed will be within range.

Also, note that there is auto power-off when there is no record being played for around 20 minutes. Once the player goes into auto power-off you will need to turn it off at the press switch at the back and wait a few moments before turning back on. If this fails then you may need to turn off at the wall to reset the power.

1. Unpack your SL1 and remove the platter from its cardboard box.
2. Ensure that the elastic band around the interior rim of the platter is not twisted and that it is flush with the platter's base.



3. Unpack the base unit and place it on a flat, stable surface
4. Holding the platter with the flat side down, place a finger through one of the larger holes and stretch the elastic band around this finger (see image below left).
5. Holding the platter with the flat side up, place a finger through the same hole and stretch the elastic band around this finger. This will help you attach it to the drive shaft. Hold the band securely with your finger and thumb (see image below right).



6. Gently lower the platter onto the central spindle of the base unit, ensuring that the elastic band is stretched over the drive shaft.

7. Gently release the elastic band and remove your finger from the hole. The band should now be securely attached to the drive shaft.



8. Remove the ties securing the tone arm.
 9. Attach the counterweight to the tone arm. This counterweight can be tightened or loosened to adjust the pressure on the stylus.
 10. Plug the supplied AC adaptor into the base unit and into a wall socket.
 11. Use the provided RCA cable to connect the base unit to the amplifiers.
 12. Place a vinyl record onto the turntable and adjust the counterweight so that the stylus applies the correct amount of pressure.
 13. Turn the unit on using the Power On/Standby button.
 14. Select **PHONO** and the correct record speed.
 15. Turn the Start/Stop selector to Start.
 16. Release the tone arm holder, lift using the lever and move it to your preferred location on the vinyl.
 17. Gently lower the tone arm to begin playback.
 18. If the turntable does not spin, ensure that the elastic band is correctly attached to the drive shaft as shown in the image above.
 19. Adjust anti-skating dial to zero
 20. Rotate tone arm counterweight fully in an anti-clockwise direction to prevent skating
-

Important safety instructions

- Follow all instructions.
- Refer all servicing to qualified service personnel.
- Do not expose the unit to dripping or splashing and make sure that no objects filled with liquids, such as vases, are placed on it.
- Heat – The appliance should be put away from heat sources such as radiators, heat, registers, stoves or other appliances (including amplifiers) that produce heat.
- Class I appliances must be connected to the mains socket outlet with a protective-earth connection.
- The mains plug connects the device and should remain operable during use.
- To disconnect the unit from the mains, the plug should be fully disconnected from the mains socket outlet. The mains plug should not be obstructed and should be easily accessible during use.
- When a power indicator light is on, it indicates the unit is connected to the mains supply. When the light is off, it indicates the unit is fully disconnected from the mains supply.
- Contact manufacturer if the unit is subject to damage or exhibits a decline in performance.

What's in the box

Check and identify the contents of your package:



- Turntable PR100.
- 45 RMP Adaptor (packed in plastic bag) 1 pc.
- Instruction Manual.
- RCA cable (to connect with main unit) 1 pc.
- AC adaptor (100V ~ 240V, 50/60 HZ)
for turntable only to connect with main unit 1 pc.

Turntable Function keys


- | | |
|------------------------------------|------------------------------|
| 1. Hinge & Transparent Cover | 9. Pitch adjustment |
| 2. Turntable | 10. Power indicator |
| 3. Anti-skating Control | 11. BT Pair (Bluetooth Pair) |
| 4. Cue lever (Tone arm lift lever) | 12. Stylus Cartridge |
| 5. Tone arm holder | 13. Line Out jacks |
| 6. Speed Selector (33 / 45 rpm) | 14. Phono EQ / Thru on |
| 7. Tone Arm | 15. AC adaptor jack (DC 12V) |
| 8. Auto Stop, ON & OFF | 16. Power on |

45 RPM adaptor is packed with manual in separate plastic bag.

Place the 45 RPM adapter over the central spindle when playing 45-RPM record.

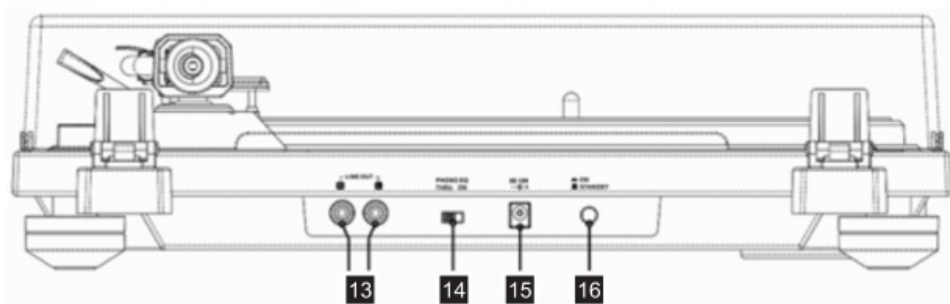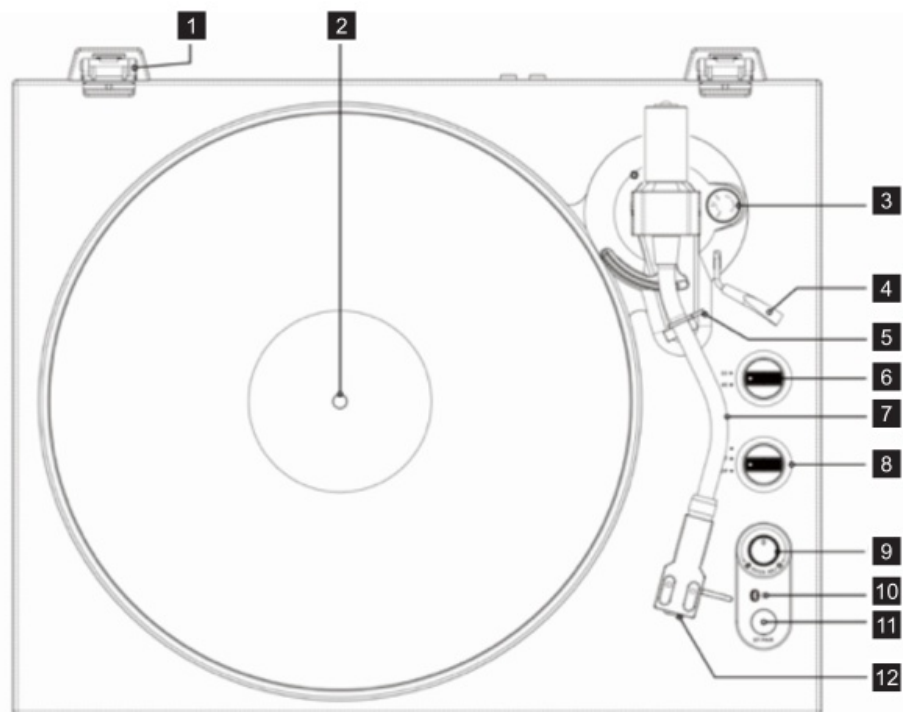

Connection

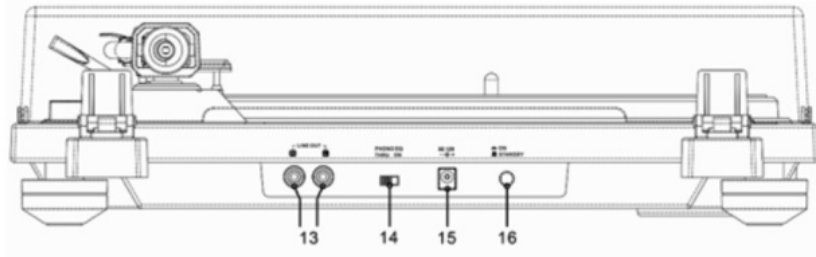

- Use the provided RCA cable to connect the phono line out jack (13) & match Red (R) & White (L) with main unit (amplifier) line in jack.
- Connect the supplied AC adaptor to the DC 12V jack (15) & plug in the power supply

Precautions

- Ensure all connections are correct before plugging the unit into power supply.
- Please read & follow the instruction carefully before connecting.
- Be sure to connect the AC adaptor at the correct voltage (AC 100V ~ 240 Hz, 50/60 Hz), Only use the own package provided.
- Wrong voltage could cause fire, short circuit or electric shock.

SPEAKER

Connect a pair of speakers with the unit via the SPEAKER output R, L jack (24) in rear panel of MAIN UNIT (Amplifier).

Shizza

HOME AUDIO

Hyperion Trading Pty Ltd
ABN: 28 681 402 693
www.hyperiontrading.com.au

48 Gardner St,
Richmond, Vic, 3121

Phone: 0494 191 337
email: support@shizza.com.au
Web: www.shizza.com.au



Showroom:

48 Gardner St, Richmond, Vic, 3121

Hours:

Monday & Tuesday: 4pm to 7pm
Wednesday: Closed
Thursday & Friday: 4pm to 7pm
Saturday & Sunday: 9am to 5pm