

Instruction Manual

Shizza
HOME AUDIO

LS1 Professional Vinyl Record Player with External Speakers



Please read instructions carefully before use and store
in a safe place for future reference

SKU: RPL025WNT

 
Package Contents

Ensure the presence of all accessories listed below. If anything is missing, contact Hyperion Trading - tony@hyperiontrading.com.au. Products not included in the package are sold separately. The package includes:

- Player – 1 pc.
- External speakers – 2 pcs.
- 45 RPM adapter – 1 pc.
- RCA cable – 1 pc.
- Instruction manual (in your hands) – 1 pc.

If you have any questions or problems regarding your device, including incomplete delivery, and cannot find answers in this manual, contact us at tony@shizza.com.au

Save the factory cardboard box and packaging materials. They represent an ideal container for transporting the device and will also help with possible device exchange.

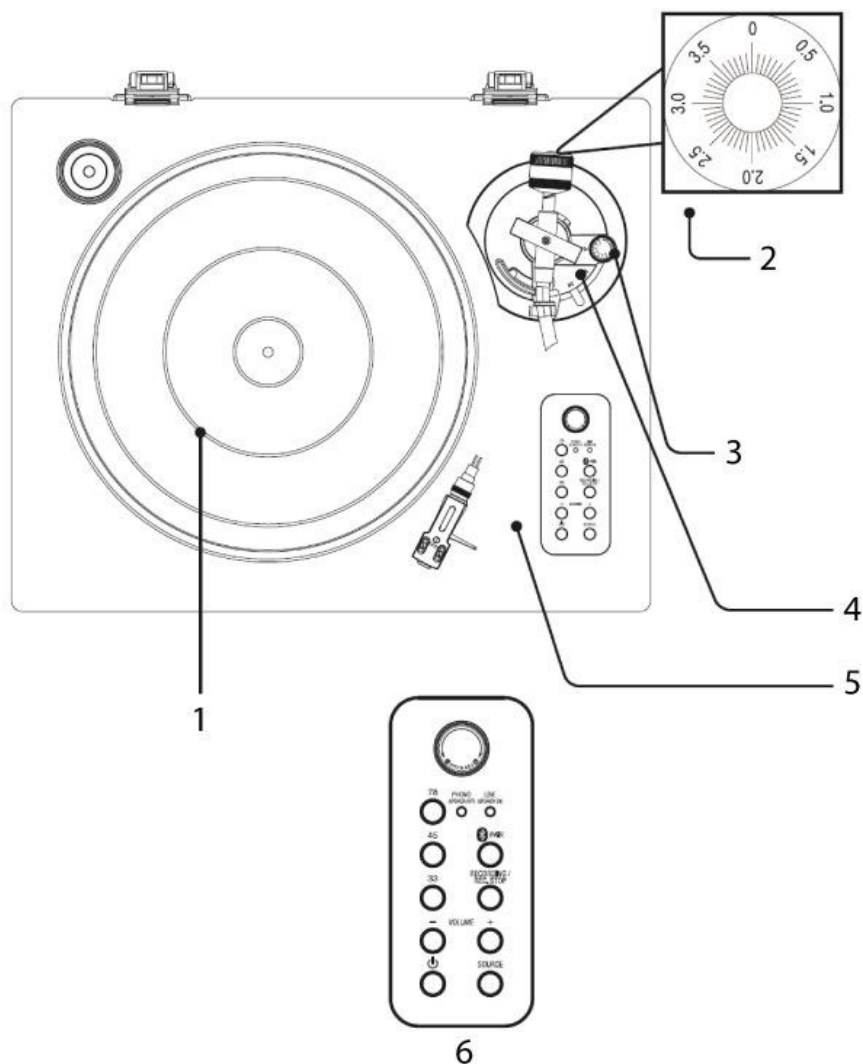

1 - Platter

2- Counterweight adjustment. Turn to adjust the stylus tracking force. Recommended value: 3 grams

4- Anti-skate adjustment. Use this adjustment to prevent the stylus from skating towards the center of the record.

5- Tonearm rest / clip

6- Tonearm and cartridge with stylus

Control Panel Labels:

Pitch Adj. – adjustment of the record playback speed.

Rec. Stop – press once to pause USB recording.

 
78/45/33 – select the speed at which the record is recorded.

Recording – press to start recording to a USB device.

Volume – volume control.

Pair – press and hold to start pairing with a Bluetooth device.

Power – power ON/OFF.

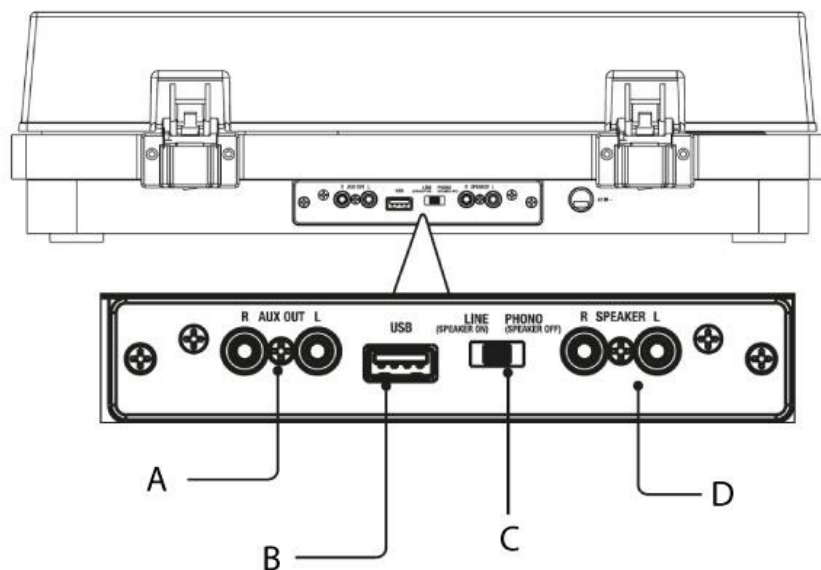

Rear Panel Connections:

A – AUX output for connecting external devices

 
C – Line / Phono mode switch

B – USB port for USB device


D – Outputs for connecting external speakers

Setup Steps:


1. Position the platter as shown in the figure below.

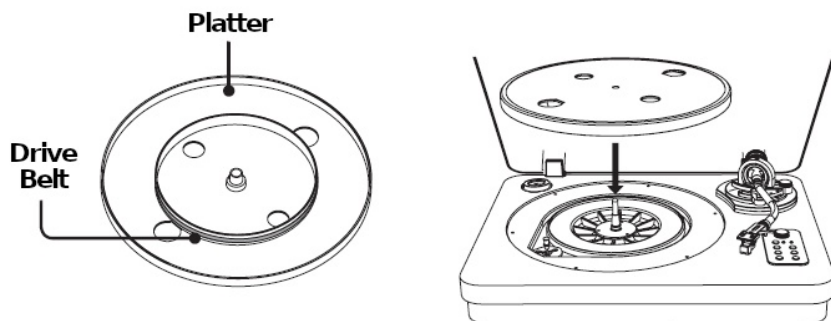

 2. Pull the belt and place it on the pulley as shown in the figure below.

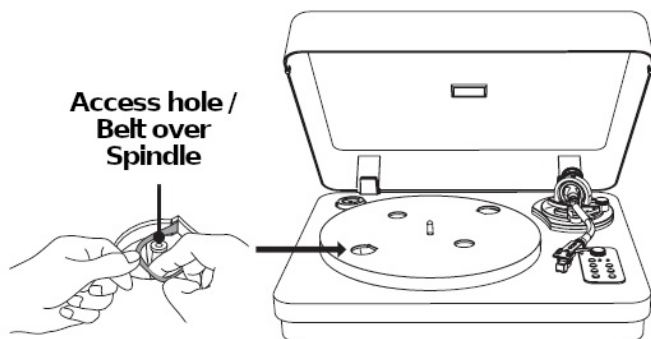

 3. Place the slipmat (with the raised grooves up) on the platter as shown in the figure below. You can now place the record.

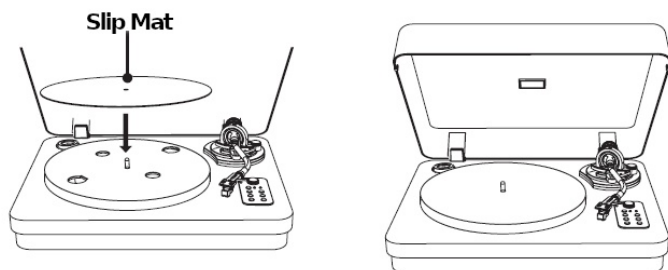

Important Notes:

- When purchasing the player, the stylus protection cover was attached to the stylus. Leave the cover in place during player setup.
- Do not connect the player to the mains socket until you have completed the installation.
- The stylus is a high-precision component. Do not touch the stylus during handling. Touching the stylus with your fingers or dropping the stylus on the platter can damage the stylus.
- Place the unit on a flat surface.
- Do not place the unit near electrical appliances (such as a TV, hair dryer, or fluorescent lamp) that may cause background hum or noise.
- Place the unit where it will not be subject to vibration, for example from speaker systems, slamming doors, etc.
- Do not expose the unit to direct sunlight, high temperatures, excessive dust, or humidity.
- Keep the unit away from electronic devices that may emit radio waves or be a source of electromagnetic interference.

Initial Setup:

- 1- Open the dust cover of the player.
- 2- Remove the transportation screw from the tonearm.
- 3- Remove the stylus protection cover by pulling it toward you.

Note: Carefully remove the stylus protection cover to avoid damaging the stylus.

Caution: Do not plug the power adapter into the socket until the player is completely ready for operation. Before plugging it in, make sure all connections are made correctly. Always turn off the power when reconnecting, moving the player to another location, etc.

Bluetooth Connection

To connect the player for the first time to a playback device that supports Bluetooth wireless technology using the Bluetooth function, you must first register (pair) the device.

- 1- Turn on the player and set the volume level.
- 2- Select Bluetooth mode using the Source button on the control panel. The Pair button will start flashing blue.
- 3- Using your wireless device (phone, tablet, etc.), go to the Bluetooth device registration (pairing) settings and find a new device named "Alive Audio Symphony" in the list.
- 4- Press the registration (pairing) button on the wireless device. Pairing is confirmed by an audio prompt from the player and the Pair button on the player glowing steadily blue.
- 5- Adjust the volume using the volume knob on the player or on the wireless audio source.

Note: The player will connect to the last paired device when Bluetooth is turned on. To connect another device, you must "forget" the player on your playback device, then repeat the entire pairing procedure with the new device.

Connecting External Speakers

- 1- Connect the external speakers to the outputs labeled Speaker L/R on the back of the player. The red output corresponds to the right channel, and the white output to the left channel.
- 2- Set the switch on the back of the player to the Line position; the corresponding LED on the player's control panel will light up white.
- 3- Start playing records; sound should come from the speakers.

AUX Connection

You will need an RCA cable (included in the package).

- 1- Connect the supplied RCA cable to the outputs labeled AUX OUT L/R on the back of the player and to an external amplifier (purchased separately).
- 2- Set the switch on the back of the player to the Phono position; the corresponding LED on the player's control panel will light up white.
- 3- Start playing records; sound should come from the speakers connected to the amplifier.

Note: Set the switch on the back of the player to the Phono position if your stereo system (amplifier) is equipped with a Phono input; otherwise, the sound will be very quiet. If your stereo system (amplifier) does not have a Phono input, set the switch on the back of the player to the Line position.

Listening to Vinyl Records

Handle the tonearm, stylus, and other components of the player with the utmost care. All components are fragile and finely tuned, so it is not recommended to apply excessive force during adjustment.

1- Turn on Turntable mode using the Source button on the control panel.

a. The LINE/Phono switch on the back of the device must be switched to Phono mode.

2- Carefully remove the protective cap from the stylus.

CAUTION: The stylus is easily broken. DO NOT USE FORCE when removing the cap.

CAUTION: The stylus is a consumable item and is not covered by warranty.

3- Release the clip that holds the tonearm in the rest position.

4- Move the tonearm lever to the up position to lift the tonearm.

5- By hand, carefully move and position the tonearm over the vinyl record where you wish to start listening.

6- Move the tonearm lever to the down position to lower the tonearm onto the vinyl record and begin playback.

7- When the player is not in use, always place the tonearm in its rest position and close the clip. These simple steps will help keep the tonearm and stylus safe and intact.

■ If you hear extraneous sounds while listening to vinyl records, make sure the player and speakers are on different surfaces.

■ Before playing a vinyl record, reduce the volume of the audio device. The loud crackling noise produced by the lowering tonearm and stylus coming into contact with the vinyl record can damage speakers or the audio device. Wait until the stylus is fully lowered, then adjust the volume.

■ Even new vinyl records may produce crackling noise during playback. Keep in mind that this noise is characteristic of playing vinyl records. Also, remember the storage rules for vinyl records, as dust and dirt adhering to them during removal from sleeves can create noise.

USB Recording

- 1- Insert a USB drive into the USB port on the back of the player.
- 2- Press the Recording button to start recording the current vinyl record. The backlight will turn red.
- 3- To pause the recording, press the Rec. Stop button; the backlight will slowly flash red.
- 4- When the recording is finished or you want to stop it, press and hold the Recording button for five (5) seconds. The red backlight will turn off, and the player will exit recording mode.

Important Notes

- 1- Do not touch the stylus tip with your fingers. Ensure the stylus does not drop onto the mat under the record or onto the edge of the vinyl record.
- 2- Clean the stylus with a soft brush as often as possible, moving the brush only from back to front.
- 3- Clean vinyl records from dust with a soft cloth or a special vinyl record cleaning kit.
- 4- Wipe the dust cover and body of the player with a soft, dry cloth.

Caution: Do not use substances containing alcohol, petrol, or any other aggressive chemicals for cleaning.

BEFORE USE, CAREFULLY READ THIS MANUAL

- Using controls or adjustments, or performing procedures other than those specified in this manual, may lead to hazardous radiation exposure. The device must not be adjusted or repaired by persons without special knowledge and qualifications.
- Do not use the device near any water source.
- Use a soft, dry cloth to clean the device.
- To prevent fire, do not cover the device's ventilation openings with newspapers, tablecloths, curtains, etc. Do not place open flame sources, such as lit candles, on the device. When placing the device on a shelf, leave 5 cm (2 inches) of free space around it.
- Do not step on or pinch the power adapter and/or its cable. Be very careful, especially near plugs and the cable outlet. Do not place heavy objects on the power adapter, as they may damage it. Keep the device out of the reach of children! Playing with the power cord, they could seriously injure themselves.
- Disconnect this device from the mains during lightning storms or if not using it for long periods.
- The device must be kept away from heat sources such as radiators, heaters, heating stoves, candles, and other heat-emitting products or open flames.
- Do not use the device near strong magnetic fields.
- Electrostatic discharge may interfere with the normal operation of the device. If this happens, simply reset and restart the device by turning it off and on. Be careful when transferring files and operate the device in an environment free from atmospheric interference.
- **Warning!** Do not insert any objects into the product through ventilation openings or gaps. High voltage passes through the product, and an inserted object may cause electric shock and/or short circuit of internal parts. For the same reason, do not spill water or any other liquid on the product.
- Do not use the device in rooms with high humidity, such as bathrooms, kitchens, steam-filled rooms, or near swimming pools.
- Do not use this device in environments where condensation may form.
- Although this device is manufactured with special care and checked several times before leaving the factory, problems may still occur, as with all electrical appliances. If you

notice smoke, excessive heating, or any other unexpected phenomena, you should immediately unplug the plug from the power outlet.

- This device should operate from a power source as indicated on the factory specification label. If you are unsure of the type of power supply used in your home, consult your dealer or local power company.
- The socket outlet must be installed near the equipment and be easily accessible.
- Do not overload AC outlets or extension cords. Overloading may cause fire or electric shock.
- Devices designed according to Class 1 of European standards for electrical equipment must be connected to grounded power outlets.
- Devices designed according to Class 2 of European standards for electrical equipment do not require grounding in the power supply network.
- Keep the device away from animals. Some animals like to bite the power cord.
- When unplugging from the socket, always hold the plug. Do not pull the power cord. This may cause a short circuit.
- Avoid placing the device on surfaces that may be subject to excessive vibration or shock.
- Use a soft, dry cloth to clean the device. Do not use solvents or petrol-based liquids. To remove stubborn stains, you can use a damp cloth with diluted detergent.
- The supplier is not responsible for damage or loss of data caused by malfunction, improper use, reconstruction of the device, or battery replacement.
- Do not interrupt the connection when the device is formatting or transferring files. Otherwise, data may be damaged or lost.
- If the device has a USB playback function, the USB memory card should be connected directly to the device. Do not use a USB extension cable, as it may cause interference leading to data loss.
- Do not let drops or splashes fall on the device. Ensure that objects filled with liquid, such as vases, are not placed on or near the device.
- If any problems occur, disconnect the AC power cord and seek service from qualified personnel.
- If the device runs on batteries, the battery should not be subjected to heating from the sun, fire, or other hot sources.
- Attention should be paid to the environmental aspects of battery disposal.

- The device can only be used in a temperate climate. Cold and warm conditions are not suitable for using the device.
- The specification label is located on the bottom or rear panel of the device. Information from the label is duplicated in the user manual.
- This device is not intended for use by persons (including children) with physical, mental, or sensory disorders, or lack of experience and knowledge, unless they are supervised or have received instructions on the proper use of the device from a person responsible for their safety.
- This product is not intended for professional, commercial, or industrial use.
- Ensure the device is placed in a stable position. The warranty does not cover damage caused by operating this product in an unstable position, vibrations or shocks, or failure to comply with any other warnings or precautions contained in this user manual.
- Never remove the casing of this device.
- Never place this device on other electrical equipment.
- Do not use or store the device in places where it may be exposed to direct sunlight, excessive dust, or excessive vibration.
- Do not allow children to play with the plastic bags used for packaging the device.
- Use only attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged (e.g., its power cord or plug), when liquid has been spilled or objects have fallen on the device, when the device has been exposed to rain or moisture, when the device is not operating normally, or when the device has been dropped.
- Do not use a damaged power cord, plug, or a loose outlet. This may cause fire or electric shock.
- Prolonged exposure to loud sounds from personal music players may cause temporary or permanent hearing loss.

Shizza

HOME AUDIO

Hyperion Trading Pty Ltd
ABN: 28 681 402 693

48 Gardner St,
Richmond, Vic, 3121

Phone: 0494 191 337
email: support@shizza.com.au
Web: www.shizza.com.au



Showroom:

48 Gardner St, Richmond, Vic, 3121

Hours:

Monday: Closed
Tuesday - Friday: 4pm to 7pm
Saturday & Sunday: 9am to 5pm