

Instruction Manual

Shizza
HOME AUDIO

G28 **Vinyl Record Player Turntable** **with USB Encoding and 20W** **Integrated Speakers**



Please read instructions carefully before use and store
in a safe place for future reference

SKU: RPL027WGR



◦ Auto-Stop, 3-Speed (33-1/3, 45&78 rpm) turntable
◦ Bluetooth,FM,USB,TF card
◦ Aux-In,USB encoding
◦ Line out
◦ Built-in Stereo Speakers
◦ Headphone Jack
◦ Amplifier Output Power: 2*8ohm 10watts
◦ Power Adapter: 12v 3A
◦ Piezoelectric Ceramic Cartridge Needle

PLEASE NOTE: Before use make sure to remove the plastic cover that is protecting the needle!

Initial Setup

1. Place the record player on a flat and level surface . The selected location should be stable and free from vibration.
2. Remove the tonearm clip that is holding the tonearm.
3. Connect the DC adaptor to the Power Jack of the record player .
4. Select the correct speed of the vinyl record you played (33 $\frac{1}{3}$ /45/78).
5. When playing the large-hole disc, place the 45 RPM Adapter into the middle.

Note : Do not plug the DC power adaptor to power outlet before all the assembly is completed Before turning the power on , make sure again all the connection settings are correct . Always turn off the power when connecting or disconnecting.

Auto-stop

If the Auto-stop Switch is set to ON position , the platter will stop spinning automatically when the record plays to the end . In some rare occasion , if the turntable stops playing before the end of the record , set the switch to OFF position the turntable should overcome this issue.

Output Connection

Connect to external loudspeaker or power amplifier with audio wire:Red plug connect to "R" channel output,White plug connect to "L" channel output.

Tips: please confirm the connection before playing, after the connection is good, control the volume by power amplifier audio.

Playing a record

1. Rotate the On / Off Volume Knob to turn on the power ,the power led will be light.
2. Set the Function to PHONO position.
3. Select the correct speed of the vinyl record you played (33 $\frac{1}{3}$ /45/78).
4. Place the record on the turntable . Use the 45 RPM Adapter on the record spindle if necessary.
5. Remove the stylus shield from the stylus assembly.

Note : To avoid stylus damage , make certain the included stylus shield is in place whenever the turntable is being moved or cleaned.

6. Release the tonearm Hold Down Clip.

Note : When the turntable is not in use , remember to lock back hold down clip.

7. Use the Tonearm Lever to lift up the tonearm.
8. Gently move the tonearm over the record where play is desired to begin . Set the Tonearm Lever back to the down position , the tonearm will descend slowly onto the record and begin to playback.
9. When the record is finished playing , use the Tonearm Lever again to raise the tonearm and then return it to the Tonearm Rest . Release the lever to let the tonearm sit back at its rest . To suspend the playback , repeat the same steps.
10. Lock the Hold Down lip to secure the tonearm.

 

USB encoding:

Turn on the power volume switch and turn the volume to moderate

- Insert your USB equipment, press MODE key, switch to vinyl record playback function.
- Place the cartridge on the music you want to record, then long press the REC key (screen will display REC), entering recording state now.
- After the music is played, press the REC key to end recording.
- Press MODE to switch to USB mode, and press the previous song, it's the music we just recorded.

Gramophone

1. Turntable Platter
2. Counterweight
3. Tonearm base
4. Speed Switch (33 $\frac{1}{3}$ /45/78)
5. Automatic stop switch
6. Tonearm lever
7. Function
8. Hold down clip
9. Tonearm
10. Volume switch
11. Power switch
12. Piezoelectric Ceramic Cartridge
13. LINE OUT audio output interface
14. AUX IN Jack (Antenna Jack)
15. DC IN power Jack

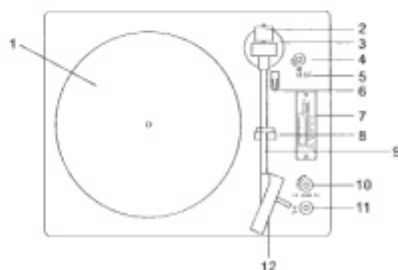

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package.

①	Belt	②	45 rpm adapter	③	ABS platter
④	Turntable	⑤	Turntable slip mat	⑥	Power adaptor
⑦	Aluminum platter	⑧	Radio antenna		

To avoid fire or vibration, don't extend the power cord or use other socket, make sure to insert the contact piece of the plug into the hole completely.

 The lightning symbol with an arrow in the equilateral triangle warns the user of the presence of a non-insulated hazardous voltage sufficient to cause an electrical shock in the outer shell of the product.	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN WARNING: To avoid electric shock, please do not move the parts inside the cover plate (or back plate), consult a professional for maintenance.	 Please use the original power adapter, the use of other non-compliant adapters may cause damage to the product
--	--	---

Safety Instructions

1. Choose a safe location and do not use this product near water or heat source.
2. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards . Refer all servicing to qualified service personnel.
3. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
4. Unplug the product during lightning storm or when unused for long periods of time.
5. Do not move the power cord randomly or squeeze the plug.
6. Do not attempt to clean the unit with chemical solvent as this might damage it.
Using a clean&dry cloth is recommended for cleaning.
7. Before starting the machine, please confirm whether the plug is fully plugged in .
8. Please unplug the power before moving the player.

Bluetooth Function:

- 1.Set the Function to BT position.
- 2.Turn on the Bluetooth feature of your audio device , search for "Bluetooth " and pair.
- 3.Once your device is successfully paired with the unit , you will hear "Ding Dong"
- 4.Play and control music from your device to the record player.

FM function:

Choose the FM mode, the radio function opening, added the antenna design for better reception of radio signals.

TF function:

If you have a TF card(Micro SD Card), just insert to the TF interface, and then you can enjoy your music directly.

Shizza

HOME AUDIO

Hyperion Trading Pty Ltd
ABN: 28 681 402 693

48 Gardner St,
Richmond, Vic, 3121

Phone: 0494 191 337
email: support@shizza.com.au
Web: www.shizza.com.au



Showroom:

48 Gardner St, Richmond, Vic, 3121

Hours:

Monday: Closed
Tuesday - Friday: 4pm to 7pm
Saturday & Sunday: 9am to 5pm